

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

## DANGER —

Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

## WARNING —

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert objects into an opening.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. To prolong the life of the dryer, keep filters clean of hair and dust.
16. Do not use with voltage converter.

20. For additional protection, the installation of a residual current device (RCD), having a rated residual operating current not exceeding 30mA, is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.
21. Before plugging in, read the information about dual voltage contained in the "DUAL VOLTAGE" section of this manual.

17. Do not use this appliance near bathtubs, showers, toilets or any other recipient containing water.
18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
19. When the appliance is used in bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

## SAVE THESE INSTRUCTIONS

## SAFETY INSTRUCTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Burn Hazard. Keep appliance out of reach from young children, particularly during use and cool down.

## OPERATING INSTRUCTIONS


This appliance is intended for professional or household use. Use on Alternating Current (50-60Hz) only. Standard dryers are designed to operate at 120-220V~.

**DUAL VOLTAGE**  
This appliance has dual voltage. It will automatically adjust to the proper voltage. Use an adapter plug (not included) with correct configuration prior to use in outlet.

**SUPER STYLING GUIDE**  
The BaBylissPRO™ Nano Titanium™ Style/Switch™ Ionic Multi-Styler & Dryer is an innovative product that allows you to achieve any hair style with one tool, eliminating the need for multiple tools.

**NANO TITANIUM**  
Your Nano Titanium Style/Switch™ Ionic Multi-Styler & Dryer has many benefits. Nano Titanium is an exceptional conductor of heat and is stable in ultra-high temperatures. The Nano Titanium technology uses micro particles of titanium to provide the ultimate heat performance for beautiful, healthy-looking hair.

**TRUE ION GENERATOR**  
The true ion generator emits negative ions for reducing static and frizz.

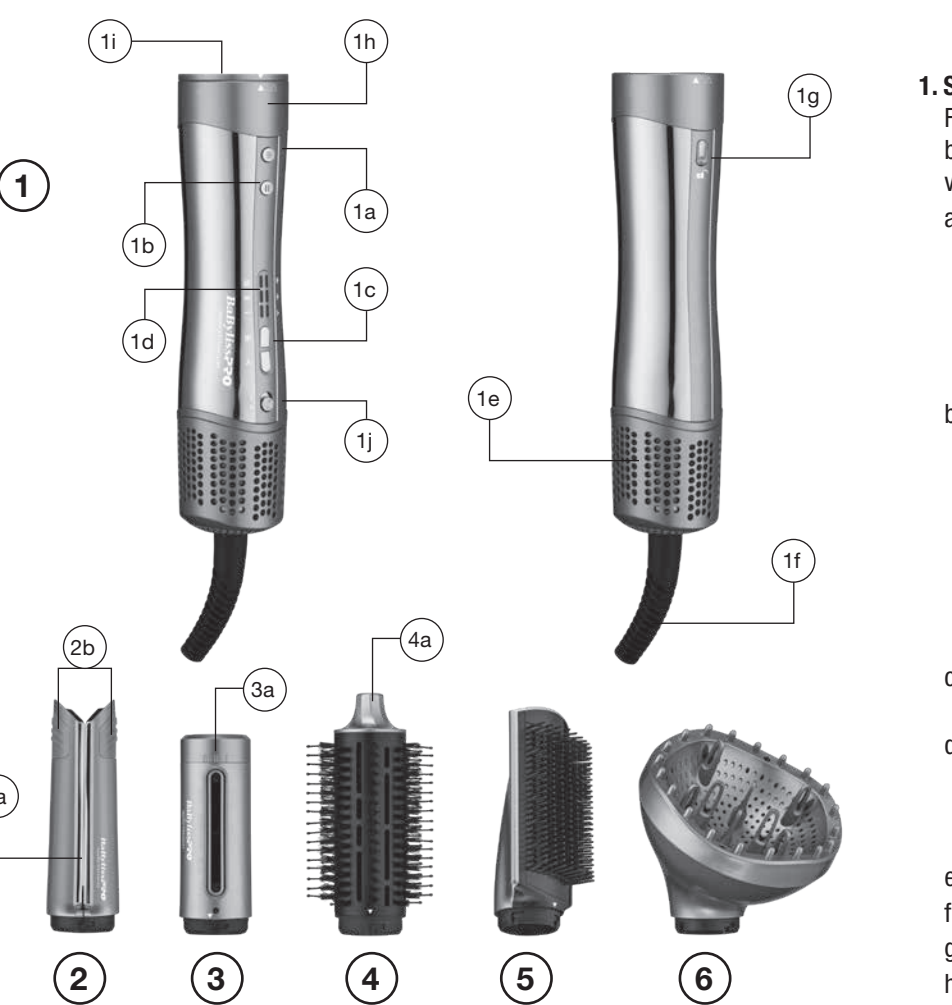

## GET TO KNOW YOUR MULTI-STYLER

### 1. Style/Switch Handle

Features a 1200-watt high-speed brushless motor with automatic dual voltage and a true ion generator.

- a. Cold shot button – Press and release the cold shot button to switch to cold air to set and lock in styles with ease. Press and release the cold shot button again to turn off the cold air and return to the used settings.
- b. Pause button – Press and release the pause button to momentarily stop the airflow, allowing time to section hair or switch attachments. The LED lights will flash white to indicate that the unit is paused. Press and release the pause button again to resume airflow.
- c. 9 heat/speed settings and LED light display.
- d. Automatic memory function – The styler handle automatically remembers and activates the last used settings upon turning on.
- e. Removable magnetic filter cover.
- f. 9-ft swivel cord.
- g. Attachment release button.
- h. True ion generator.

- i. Nano Titanium technology for maximum smoothness and shine.
- j. Power slide switch.

### 2. Smoothing Attachment

Features our root-reaching design to get close to the roots, helping to smooth flyaways for a polished finished.

- a. Titanium plates.
- b. Cool tips.

### 3. Adjustable Dryer Attachment

Features 3 options of concentrated airflow for tailored drying and styling.

- a. Turn knob at top of attachment to adjust nozzle size.
  - I – Small nozzle: high air pressure, ideal for drying smaller sections and roots.
  - II – Medium nozzle: moderate air pressure, ideal for drying medium sections from roots to ends.
  - III – Large nozzle: dispersed airflow, ideal for quickly drying larger sections and to finish drying the length of the hair.

### 4. 1 1/4" Round Brush Attachment

Features a blend of natural boar bristles and nylon bristles, providing the ideal tension and glide for a voluminous blowout.

- a. Cool tip.

### 5. Paddle Brush Attachment

Features dense bristles to gently detangle and smooth flyaways in one step. Has a unique air-vent design that distributes heat evenly.


### 6. Diffuser Attachment

Features an extra-deep bowl and extended fingers to securely hold curls for all hair types and lengths. Its waved perimeter follows the contours of your head for optimal styling.



**CLEANING THE FILTER:** To ensure the longevity of your appliance, clean the filter regularly according to the following steps. We recommend cleaning the filter after 40 hours of use, or when buildup is visible.

1. Remove the removable magnetic filter cover from the bottom of the handle by gently pulling it away from the handle.


**NOTE:** The removable magnetic filter cover does not come off from the cord.

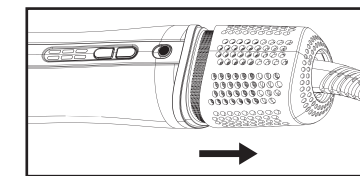

2. Using a soft brush or cloth, remove any excess dust or hair from the removable magnetic filter cover and fixed mesh filter on the handle.

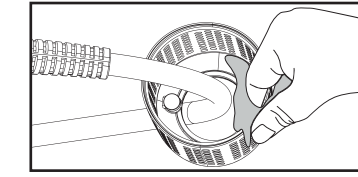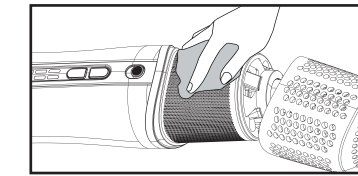

3. Once the removable magnetic filter cover and fixed mesh filter are completely clean, re-attach the filter cover to the handle by lining up the magnets until they snap together.

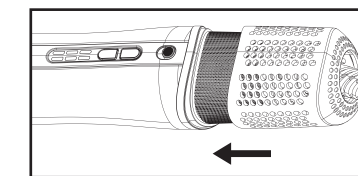

## USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. The dryer must be kept clean for proper operating performance. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

**Blocked or clogged air intake vents will cause the dryer to overheat.** If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or an authorized Rusk service representative only. No repairs should be attempted by the consumer.

### STORAGE - IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

©2025 BaBylissPRO

IB-24/386

# BaBylissPRO™

NANO TITANIUM

## Style/Switch™

## Multiestilizador & Secador Iónico

## Instrucciones/ Guía de peinado

Modelo BNTSS-5PKUZ

Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.



